

BT-300/ BT-400 **SMART REMOTE**

User Manual



Button Legend

- 1. Power
- 2. Rewind
- 3. Play / Pause
- 4. BuzzTV / Live
- 5. Menu
- 6. DPad
- 7. OK Button
- 8. Back
- 10. Volume Up / Down
- 9. Home
- 11. Red 12. Yellow
- 13. Numbers
- 14. Page Down
- 15. Source
- 16. Fast Forward
- 17. Guide
- 18. Mouse
- 19. Channel Up / Down
- 20. Last Channel
- 21. Information
- 22. Green 23. Blue
- 24. Page Up

BuzzTV Smart Remote App



NOTE1: Requires BT-400 and an enabled device. The remote must be BT paired to the device

NOTE²: If you are not using TV source pair, do not enable max audio on device

(Found in Buzz utilities under Volume control)

From the App you will be able to control:

Auto source pair your TV to the BT-400

This allows the user to have BT-400 control the TVs Power button, Volume up and down, the TV input source. Click on the tab in the app and the app will walk you through the set up.

Control the BT-400 Backlight

Program your backlight On or Off. Click on the tab and it will take you to the setting inside the device, select remote and you will see the toggle choice. (This feature is off by default for greater battery

BT Remote Pairing and Factory Reset

BT Remote Pairing


To place the remote into BT Pairing Mode, simultaneously press and hold the OK button and the HOME button for 4 seconds until it starts blinking, this indicates the remote is in Pairing Mode.



Simultaneously press and hold the **OK** button and the HOME **button** for 4 seconds until it starts blinking

BT Remote Factory Reset

If you wish to factory reset your remote to erase all settings press and hold the D-Pad Down button and the 0 (Zero) button for 4 seconds until it blinks 3 times to indicate the remote is factory reset

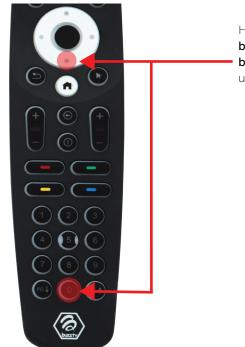

Hold the **D-Pad Down** button and the 0 (Zero) **button** for 4 seconds until it blinks 3 times

Manual TV Source Pair (2 methods)

The manual TV source pair allows control of:

TV ON / OFF

Volume up and down

TV input source change


NOTE: The BT-400 and BT-300 will pair with most popular brands, if you have an older TV or off brand this feature may not work.

The following TV brands are pre-programmed on the numeric keys (1 thru 0)

- 1. Samsung
- 2. LG
- 3. Sony
- 4. Panasonic
- 5. TCL / Thomson
- 6. Toshiba
- 7. Grundig
- 8. Sharp
- 9. Haier 0. Philips

Method 1: TV Programming Mode with a Top 10 TV Brand

Simultaneously press and hold the OK button and the Fast Forward button for 4 seconds. The remote will blink 3 times to indicate the remote is in TV source pair mode.

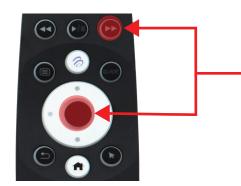


Simultaneously press and hold the **OK button** and the Fast Forward button for 4 seconds.

From the Top 10 list above find your TV code (Ex. Sony is the 3 button) Press the number associated with your TV on the remote numeric keypad. This will pair the BT-400 to the TV. The TV volume control should appear on the TV screen which indicates you are TV source paired.

Method 2: TV Brand Search

First be within 1 meter to the bottom of the TV.


Simultaneously press and hold the Rewind and OK button for 4 seconds. The remotes LED indicator will blink 3 times and then turn solid red. This indicates the remote is in TV search mode.

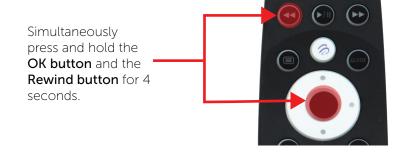

Slowly press the Channel Up button on the remote once about every 3 seconds. When the volume indicator on the TV displays, discontinue pressing the Channel Up button and press the OK button. You are now TV paired.

Static Mouse (Only in BT mode)

 Press the Cursor button to enable the Static Mouse Mode.



In Mouse Mode, the Remote Control supports [Up], [Down], [Left], [Right] and [OK] buttons.

While using the Static Mouse if the user does not press any button for 15 seconds from the last button press, The Remote Control will exit Mouse Mode.

Warranty Information

www.buzztv.com/support cs@buzztv.com